



1 – Remove the tailgate lift switch

Prerequisite

Tailgate is open.

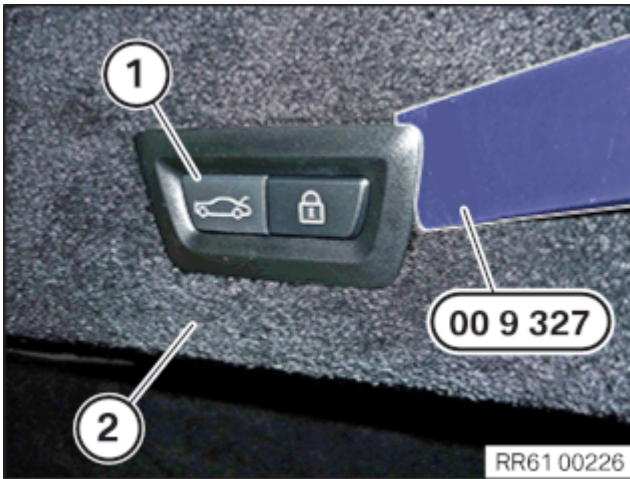


- Lever the switch for the tailgate lift (1) out of the tailgate trim panel (2) with the special tool **0 496 571 (00 9 327)**.

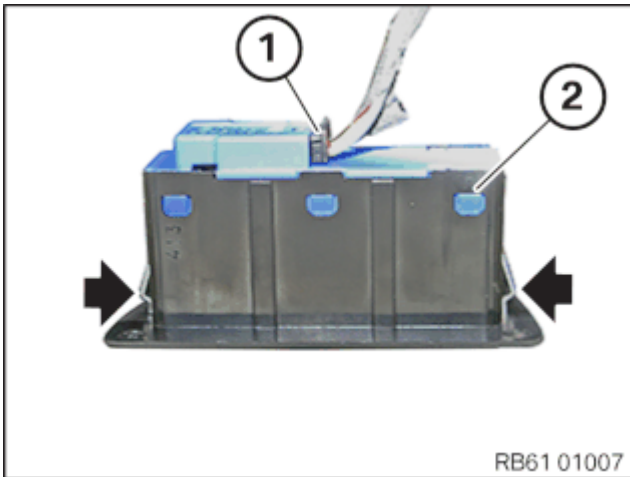


- Unlock and disconnect connector (1).
- Remove the switch for tailgate lift (2).

2 – Removing luggage compartment light on tailgate

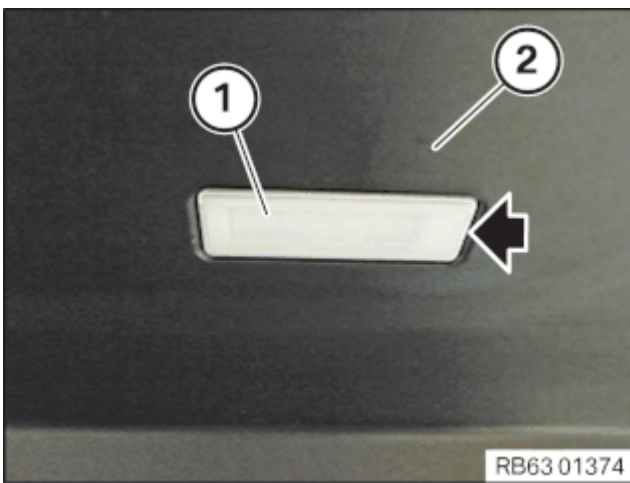

- Lever out luggage compartment light (1) using the special tool **0 493 681 (64 1 020)** from the tailgate trim panel (2) at the marked point.
- Disconnect associated plug connection.

3 – Removing the trim for the top rear window frame

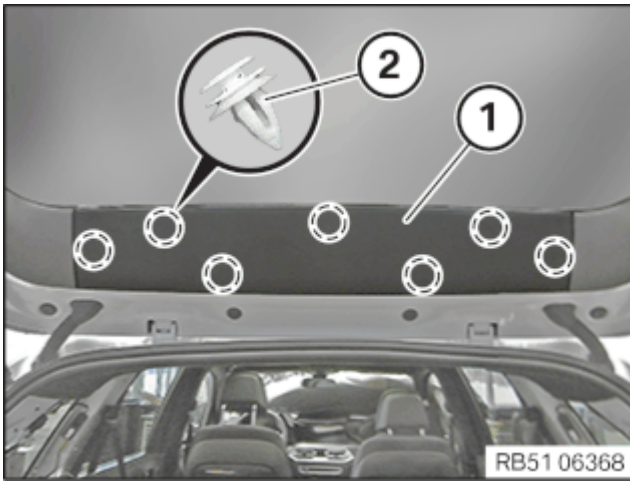


- Unclip trim for the top rear window frame (1) on the clips (2) and remove.

4 – Removing the trim for the rear window frame on the left and right side




Description is for left component only. Procedure on the right side is identical.

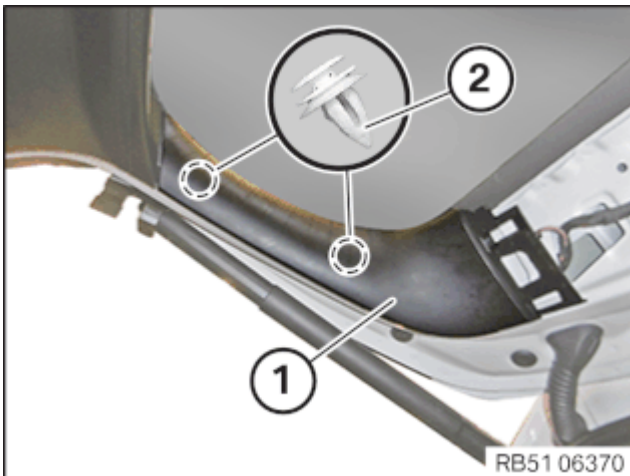

► Remove the trim for the rear window frame on the side

- Unclip the trim for the side rear window frame (1) at the clips (2) and remove it.

5 – Remove tailgate trim panel

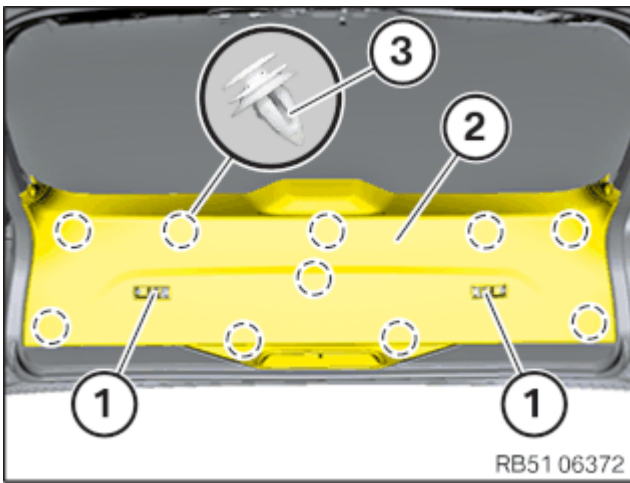


- Loosen screws (1).
- Unclip and remove tailgate trim panel (2) at the clips (3).

MAIN WORK


6 – Removing the rear light on the right tailgate




Description is for left component only. Procedure on the right side is identical.

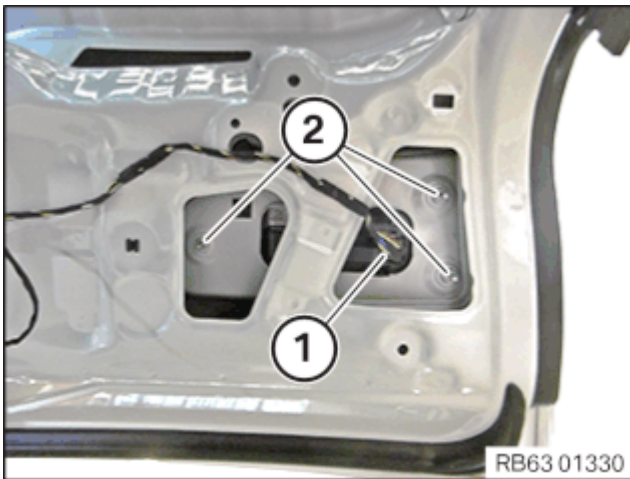

- Unlock plug connection (1) and disconnect.
- Loosen nuts (2).

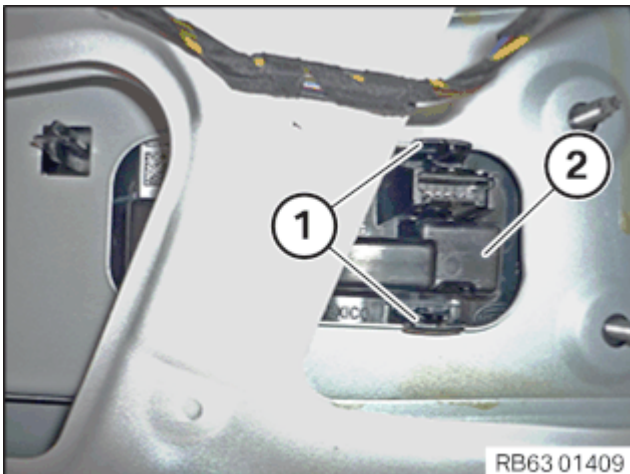

- Unlock the latch mechanisms (1).

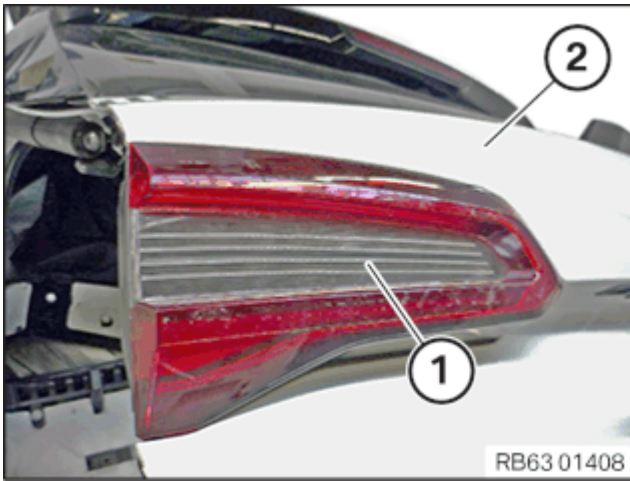


- Remove rear light (1) from tailgate (2).

7 – Installing the right rear light on the tailgate



Description is for left component only. Procedure on the right side is identical.

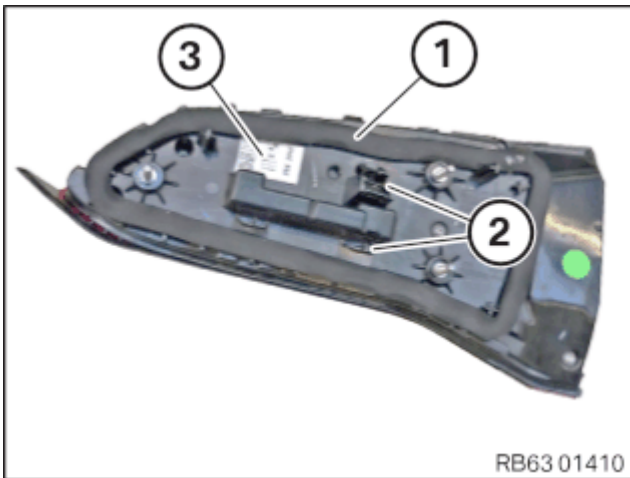

Check

- Check the seal (1) and the retaining lug (2) on the rear light (3) for damage.


Result

If the seal (1) or the retaining lugs (2) are damaged.


Measure

- Renew seal (1) or rear light (3).


Parts: Seal, rear light

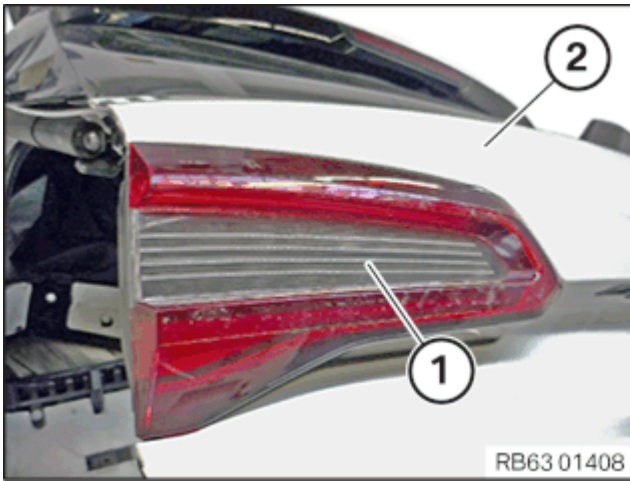

- Position the rear light (1) on the tailgate (2).

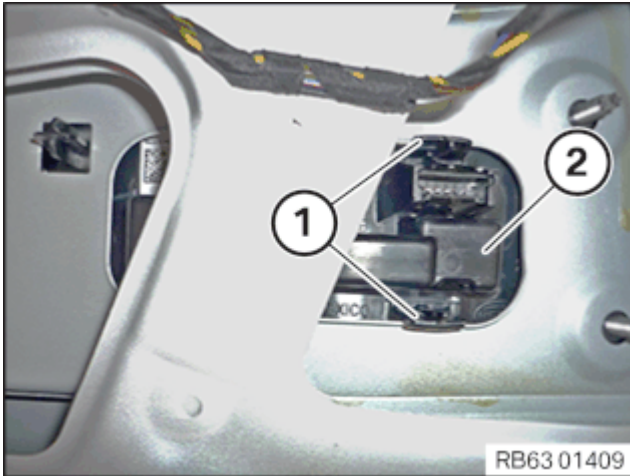

- Lock the latch mechanisms (1).
Retaining lugs must audibly snap into place.

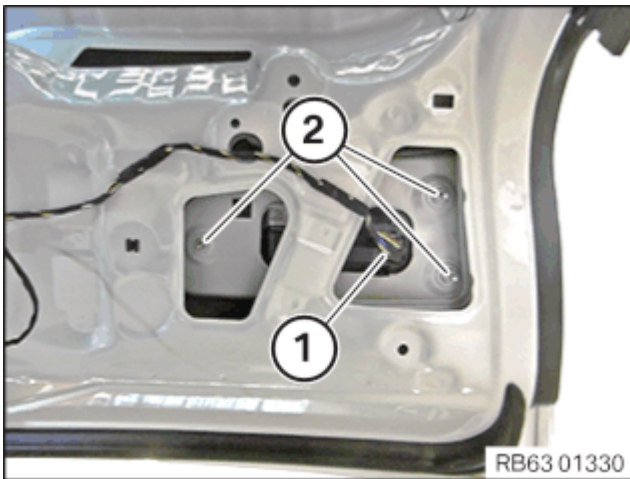

- Tighten nuts (2).


Rear light at tailgate

M5 nut	Tightening torque	2,3 Nm
--------	-------------------	--------


- Connect plug connection (1) and lock.

POSTPROCESSES

8 – Installing the tailgate trim panel

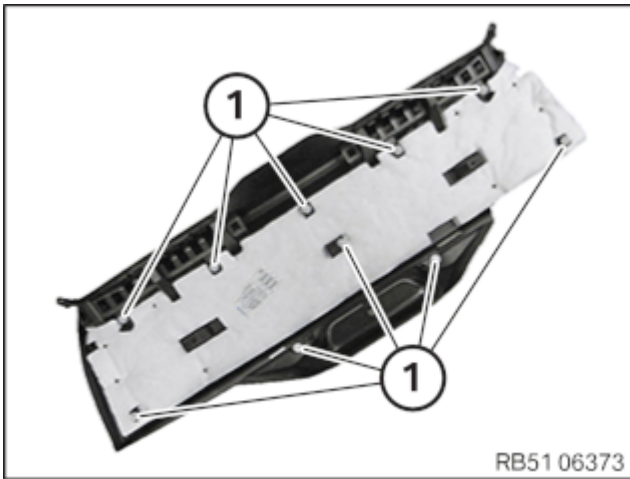

- Check the clips (1).
Replace broken for missing clips (1).

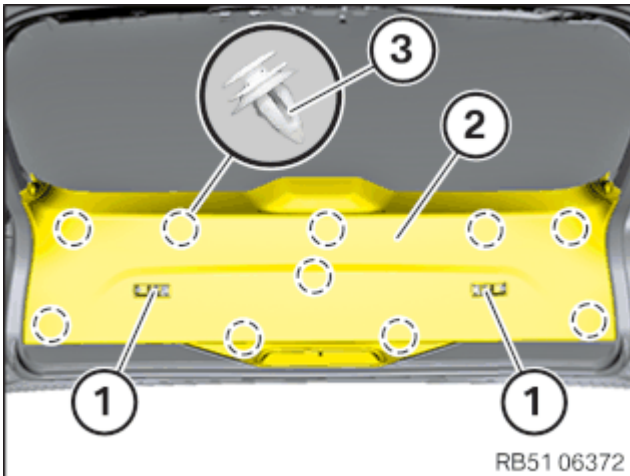

- Position tailgate trim panel (2) correctly and clip in on the clips (3).
- Tighten the screws (1).

Tailgate trim panel to tailgate

Oval-head screw	Tightening torque	1,5 Nm
-----------------	-------------------	--------

9 – Installing the trim for the left and right side rear window frame




Description is for left component only. Procedure on the right side is identical.

► Install the trim for the rear window frame on the side


- Check the clips (1) for damage and presence.
Defective or missing clips (1) must be renewed.



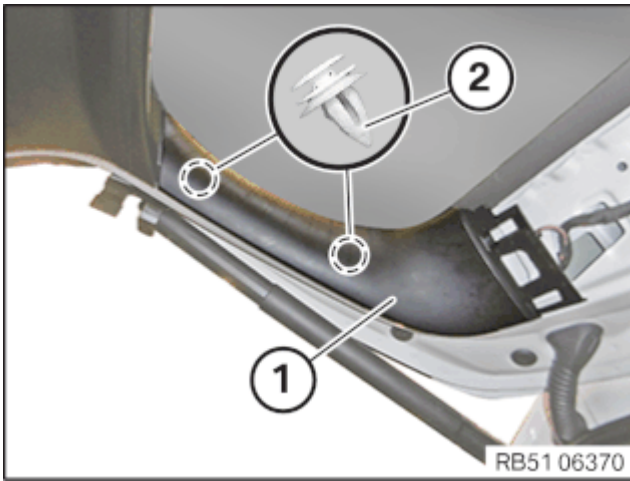


- Correctly position the trim (1) for the side rear window frame and clip it into the clips (2).

10 – Installing the trim for the top rear window frame

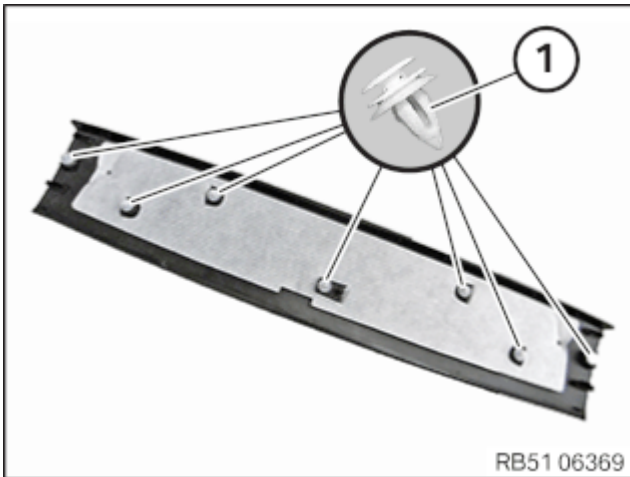


- Check the clips (1) for damage and presence. Defective or missing clips (1) must be renewed.

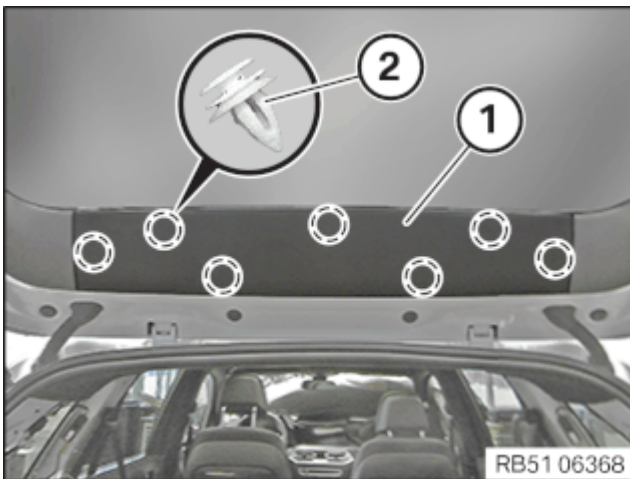

- Correctly position the trim (1) for the top rear window frame and clip in at the clips (2).

11 – Installing luggage compartment light on tailgate

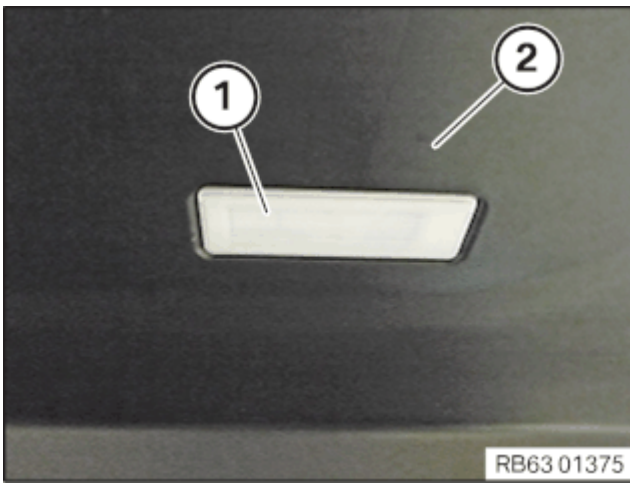


- Connect associated connector.
- Position luggage compartment light (1) and install in tailgate trim panel (2).


12 – Install the tailgate lift switch

Prerequisite

Tailgate is open.

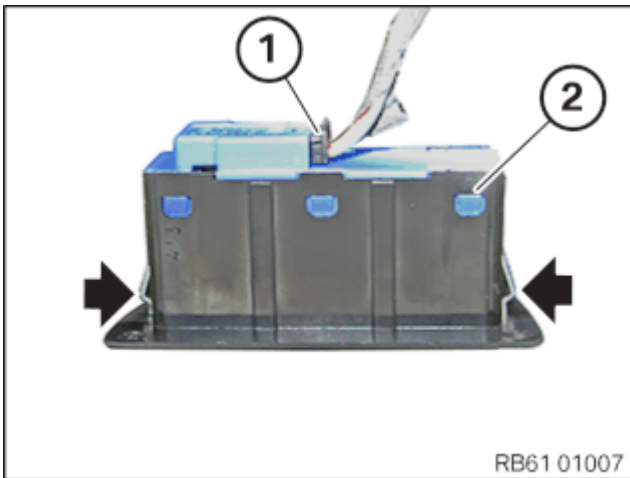

- Connect the connector (1) with the switch (2).

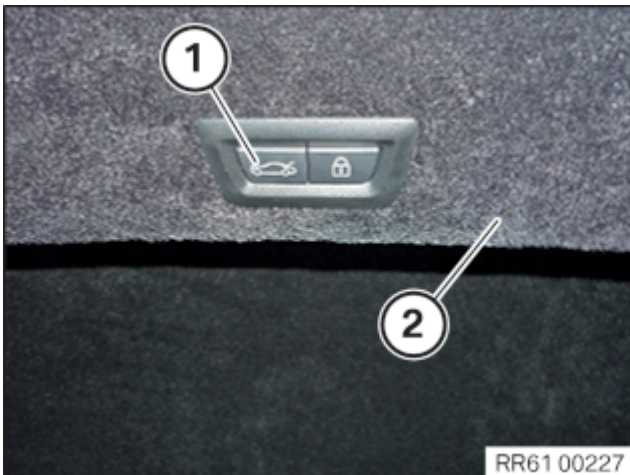

- Install the automatic tailgate op