



Remove cupholder

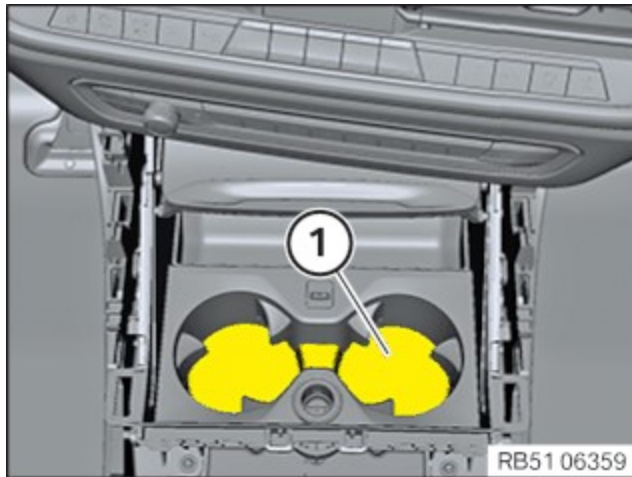

Remove the insert (1).

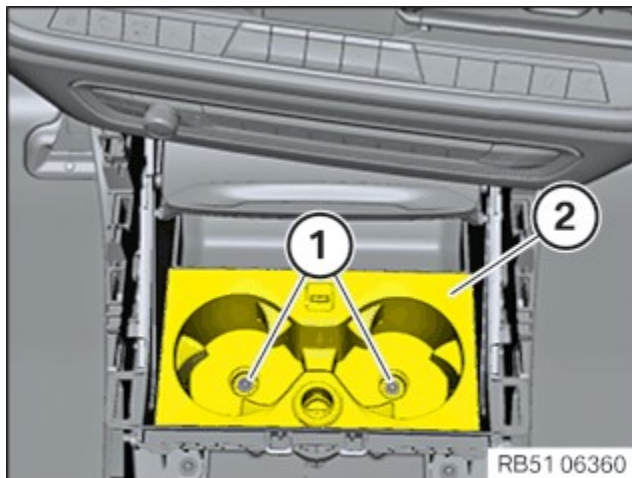


Loosen screws (1).

Feed the cup holder (2) out to the top.

Unlock associated plug connections and disconnect.

Removing storage compartment at front

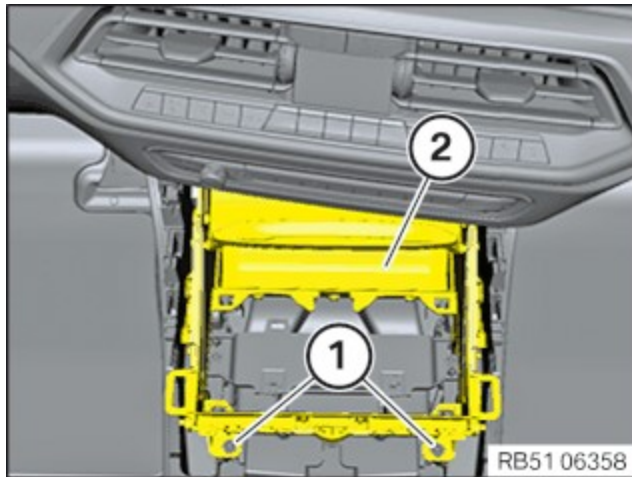

Loosen screws (1).

Release the storage compartment (2) and guide it to the rear and out of the front clamps.

If necessary, unlock and disconnect plug connections and remove storage compartment.