



BMW B58

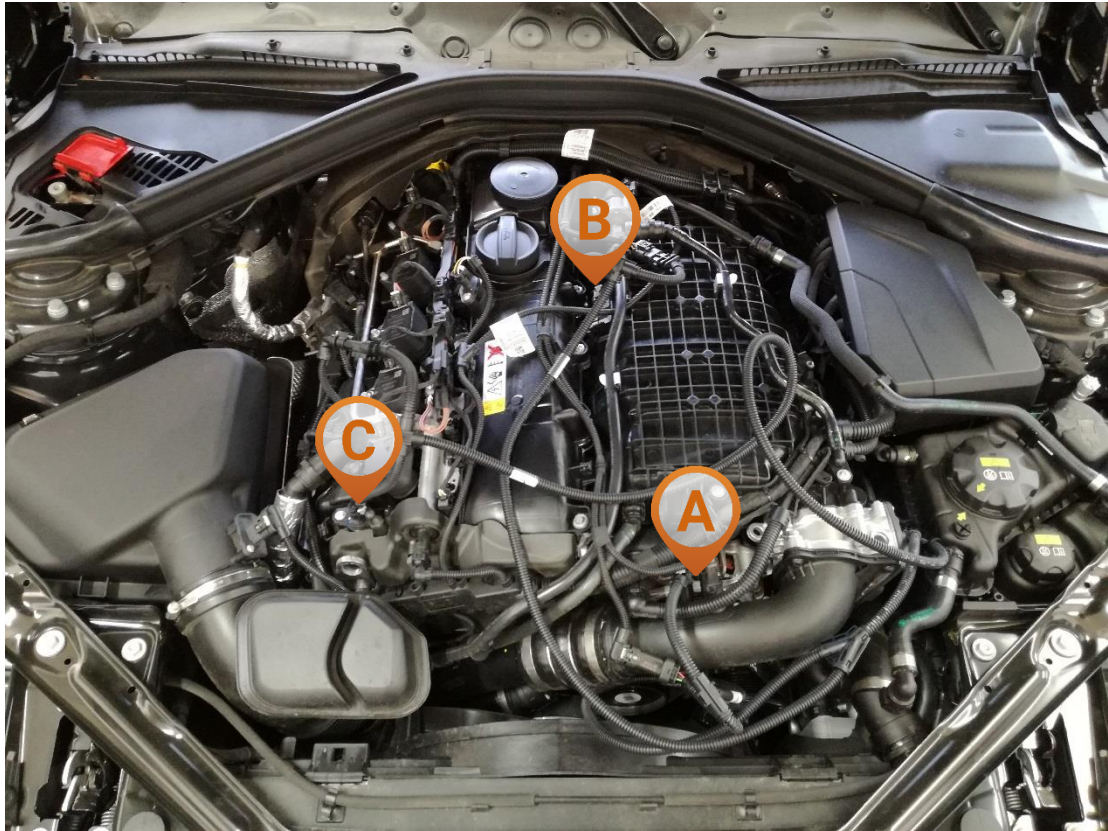

- DE
- Motorabdeckung entfernen
 - Sensor A: Ladedrucksensor
 - Sensor B: Saugrohrdrucksensor
 - Sensor C: Nockenwellensensor

- EN
- Remove engine cover
 - Sensor A: Turbo pressure sensor
 - Sensor B: Intake air pressure
 - Sensor C: Camshaft sensor


BMW B58

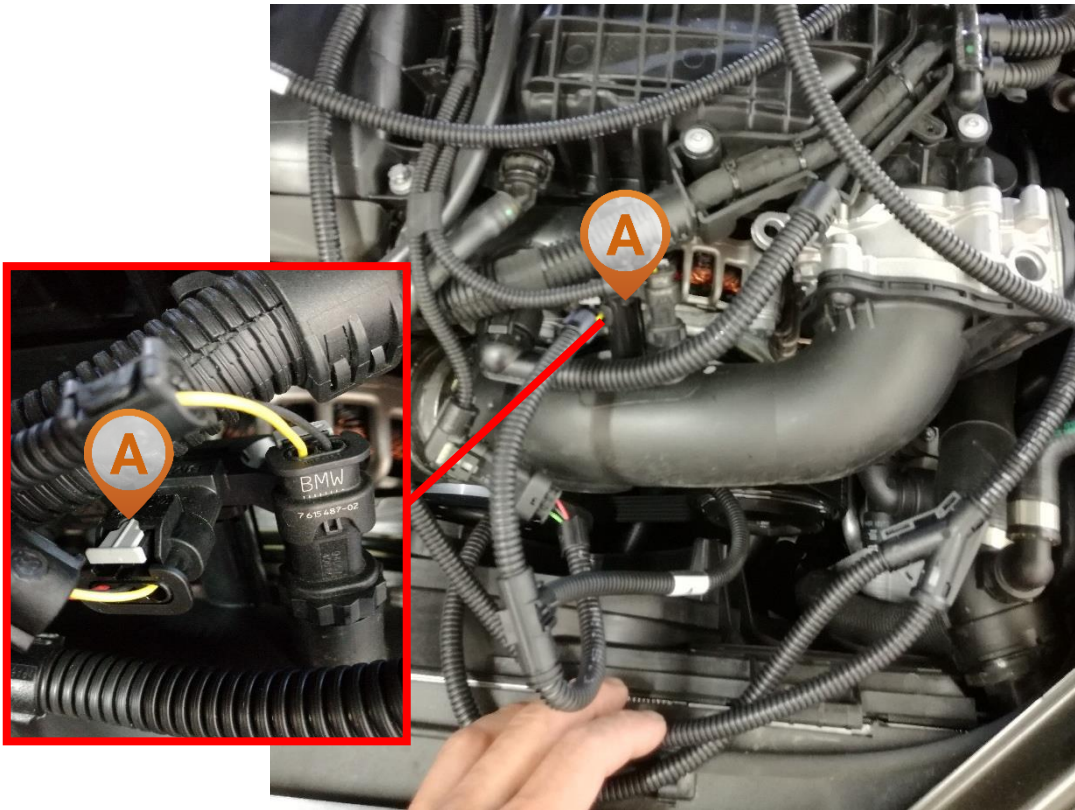

DE • Sensor A: Ladedrucksensor

EN • Sensor A: Turbo pressure sensor

BMW B58

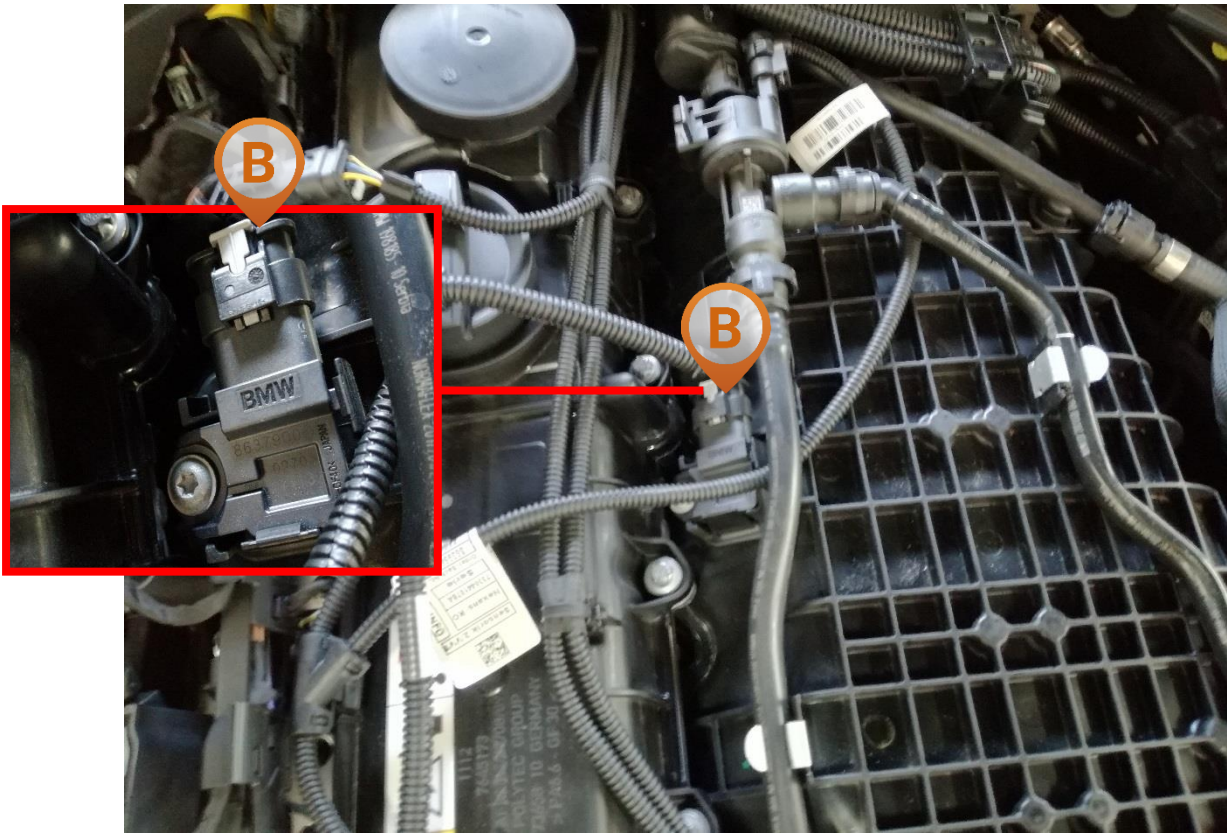

DE • Sensor B: Saugrohrdrucksensor

EN • Sensor B: Intake air pressure

BMW B58



DE • Sensor C: Nockenwellensensor

EN • Sensor C: Camshaft sensor