


## Removing the front storage compartment trim

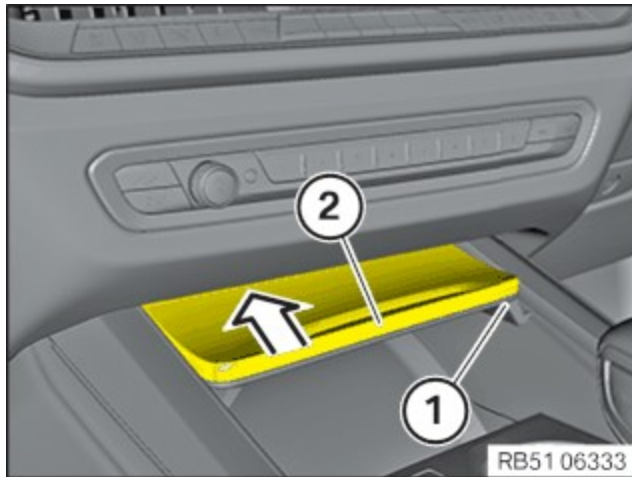


Hold down lower section (1) and slide storage compartment trim (2) in direction of arrow slightly to the rear.

Guide out the storage compartment trim (2) toward the top and remove it.


## MAIN WORK

### 8 – Removing the wireless charging station

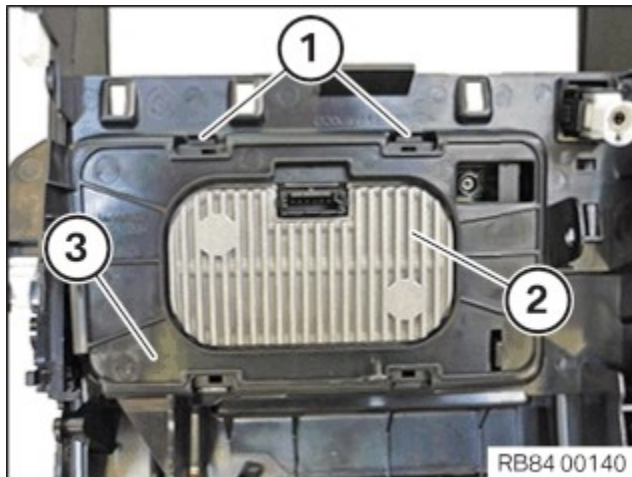

Release the latch mechanisms (1) and remove the wireless charging station (2) from the front storage compartment (3).


### 9 – Removing interior aerial on the front storage compartment

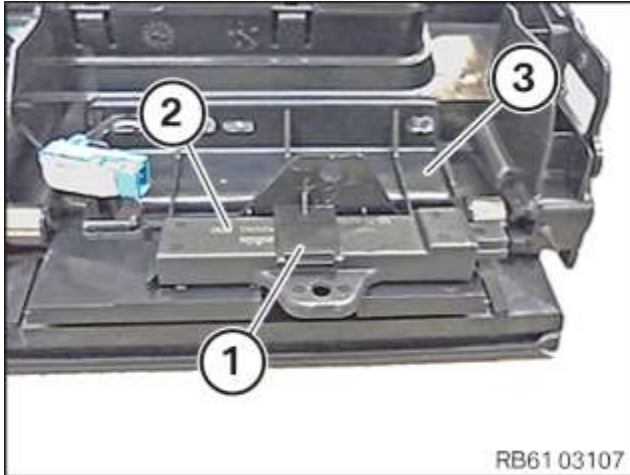

Unlock the latch mechanism (1).

Detach the interior aerial (2) from the storage compartment (3) and remove.


### **10 – Removing connecting socket for the USB port**

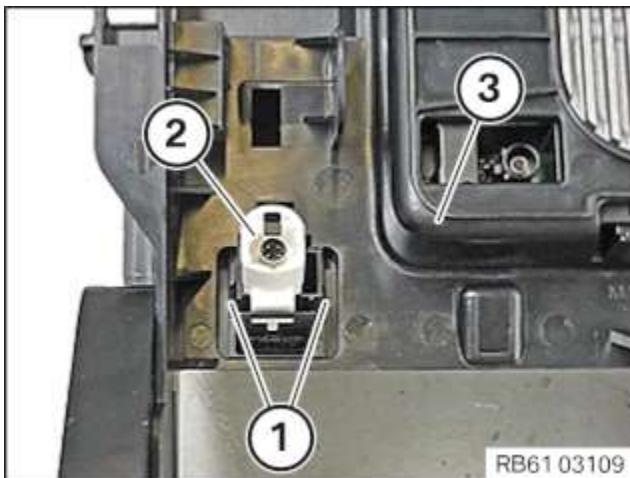

Loosen the latch mechanisms (1).

Remove the connecting socket (2) from the storage compartment (3).


### **11 – Installing the wireless charging station**

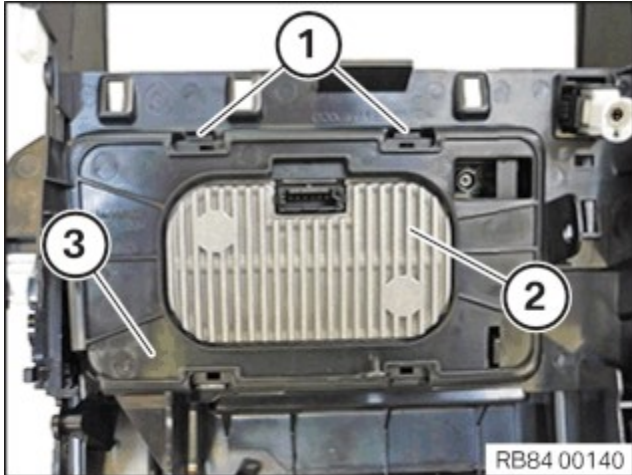

Position wireless charging station (2) and install in the front storage compartment (3).


Latch mechanisms (1) must engage correctly.

### **12 – Install front interior aerial on storage compartment**

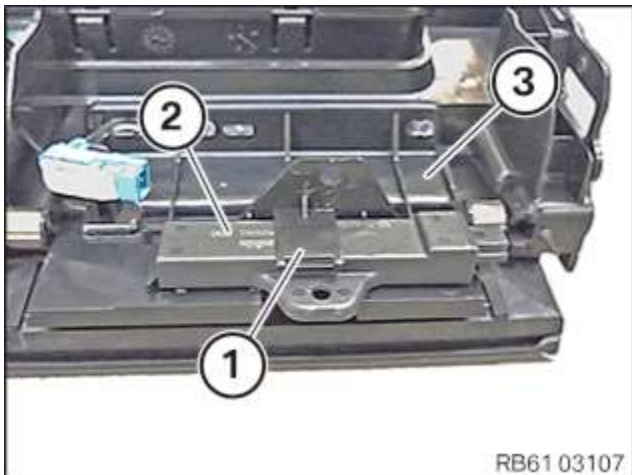

Position interior aerial (2) on storage compartment (3) and snap into the latch mechanism (1).


### **13 – Installing the connecting socket for the USB port.**

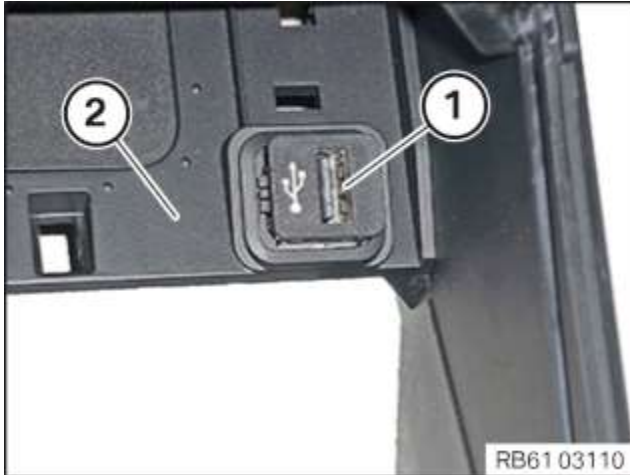


Position the connecting socket (1) and install it in the storage compartment (2).

## POSTPROCESSES

### 14 – Installing front storage compartment trim

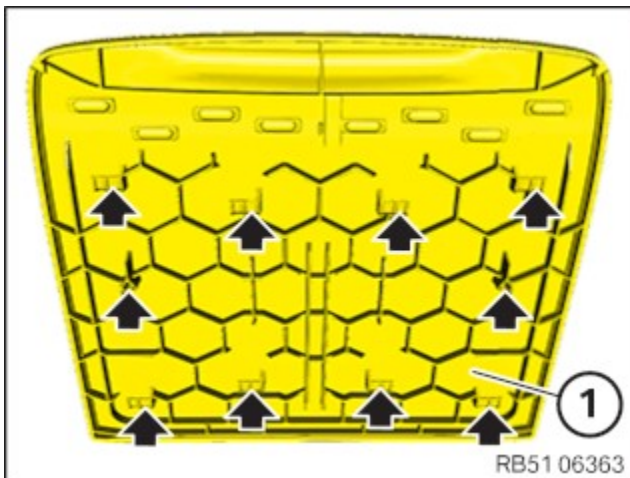

Check all guides or latch mechanisms (arrows) for damage, renew the storage compartment trim (1) if necessary.

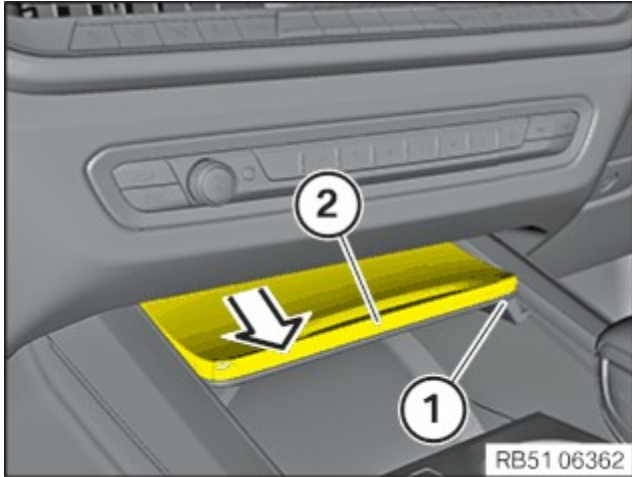

Position and clip in storage compartment trim (2) on the lower section (1) in the direction of